



Service Parts List

119-0050 Table Saw Stand - V1

No.	Part Code	Description	Qty
1	119-0236	End Cap	8
2	119-0236-1	End Cap	2
3	119-0234	Spacer	8
4	F-CB-M8-83-ST-BO	F-CB-M8-83-ST-BO	8
5	119-0237	Handle	2
6	119-0237-1	Handle A	1
7	119-0237-2	Handle B	1
8	F-CB-M8-40-ST-BO	F-CB-M8-40-ST-BO	2
9	F-SPHPZ-M6-50-ST-BO	F-SPHPZ-M6-50-ST-BO	4
10	F-WW-M6-ST-BO	F-WW-M6-ST-BO	4
11	119-0235	U-Tube	1
13	F-SPHPZ-M5-50-ST-BO	F-SPHPZ-M5-50-ST-BO	2
14	F-NNIF-M5-ST-BO	F-NNIF-M5-ST-BO	3
15	119-0241	Support bar	1
16	119-0321	Left front tube	1
17	119-0322	Right front tube	1
18	119-0240	Front connecting tube	2
19	F-SBHS-M6-53-ST-BO	F-SBHS-M6-53-ST-BO	1
20	F-NNIF-M6-ST-BO	F-NNIF-M6-ST-BO	6
21	119-0231	Pedal	1
22	119-0322	Locking plate	1
23	F-SCHPZ-M5-10-ST-BO	F-SCHPZ-M5-10-ST-BO	1
24	F-NNIF-M5-ST-BO	F-NNIF-M5-ST-BO	3
25	119-0230	Hook Spring	1
27	119-0228	Tyre	2
28	F-NNIF-M8-ST-BZP	F-NNIF-M8-ST-BZP	12
29	F-W-M10-ST-BO	F-W-M10-ST-BO	2
30	119-0233	Rear connecting tube	1
31	057-0297	Wing nut	4
32	119-0239	Left rear tube	1
33	119-0322	Right rear tube	1
35	119-0232	Foot pad threaded screw	1
36	057-0300	Support foot pad cover	1
37	119-0323	Rubber stopper	1
38	F-SPHPZ-COMBI-M4-14-ST-BO	F-SPHPZ-COMBI-M4-14-ST-BO	1
39	119-0238	Handle Domed End Cap	2
40	F-SHCS-M6-55-ST-BO	F-SHCS-M6-55-ST-BO	1
41	119-0324	Rear support foot group	1
42	119-0325	Non-slip mat	1
43	119-0326	Stop block	2
44	F-W-M6-ST-BO	F-W-M6-ST-BO	1
45	F-SHCS-M6-75-ST-BO	F-SHCS-M6-75-ST-BO	4
46	F-W-M6-ST-BO	F-W-M6-ST-BO	4
47	F-WW-M6-ST-BO	F-WW-M6-ST-BO	4

Service Parts List

119-0050 Table Saw Stand - V1