

Item	Description	Part Number	Qty
1	Adjustment Securing Pin	133-0123	2
2	Socket Head Cap Screw M5x10	F-SHCS-M5-10-ST-BZP	2
3	Foot Lever Bar	133-0127	1
4	Extension Arm	133-0102	2
5	Counter Sink Screw Pozi M6x16	F-SCHPZ-M6-16-ST-BZP	6
6	Pan Head Screw Pozi M6x12	F-SPHPZ-M6-12-ST-BZP	4
7	Lock Knob Nut	133-0135	2
8	Table Assembly	133-0101	1
9	Slide Rail Assembly (Right Hand)	133-0139	1
10	Round Tube Cap (Wheel Frame)	133-0116	4
11	Square Tube Cap	133-0113	2
12	Table Handle	133-0110	1
13	Lock Knob Spring	133-0136	2
14	Round Tube Cap (Foot Frame)	133-0137	2
15	Nylon Stop	133-0114	4
16	Slide Rail Assembly (Left Hand)	133-0138	1
17	Flat Washer ϕ 13.3x24x1.5	F-WB-M12-ST-BZP	2
18	Flat Washer ϕ 5x12x2.0	F-WC-M5-ST-BZP	2
19	Hex Bolt M12 x 110	F-HB-M12-110-ST-BZP	4
20	Flat Coach Bolt M8 x 50	F-HB-M8-50-ST-BZP	4
21	Frame Bottom Handle Assembly	133-0107	1
22	Eclip 6	F-ECLIP-6-100-ST-BO	1
23	Screw Pan Head Pozi M6x8	F-SPHPZ-M6-8-ST-BZP	2
24	Curved Washer	133-0126	4
25	Spring	133-0122	1
26	Adjustment Knob	133-0119	4
27	Lock Knob	133-0134	2
28	Rivet 5x16	F-BRVET-5-16-AL	4
29	Lower Wheel Frame	133-0105	1
30	Workpiece Support Arm Insert	133-0112	2
31	Extension Arm Insert	133-0133	2
32	Gas Strut	133-0130	1
33	Lower Foot Frame	133-0108	1
34	Workpiece support end cap	133-0111	4
35	Workpiece Support	133-0103	2
36	End Stop Adjustment Knob	133-0120	2
37	End Stop Bracket	133-0104	2
38	Locking Pin	133-0121	1
39	Screw Pan Head Pozi M6x35	F-SPHPZ-M6-35-ST-BZP	2
40	Rubber Bump Stop	133-0132	2

41	Adjustable rubber foot	133-0117	2
42	Release Lever	133-0118	1
43	Wheel	133-0129	2
44	Nyloc Nut M12	F-NNIF-M12-ST-BZP	4
45	Nyloc Nut M6	F-NNIF-M6-ST-BZP	6
46	Nyloc Nut M8	F-NNIF-M8-ST-BZP	4
47	Spacer	133-0131	4
48	Coach Bolt M6x55	F-CB-M6-55-ST-BZP	2

evOLUTION[®]
evolutionpowertools.com

Service Parts List

V2

MITRE CHOP SAW STAND POWERED LIFT

MCS STAND